

D-Link DSL-2640B Realm Change Guide.

1. Start your Internet Browser and in the address bar type the following IP address **http://192.168.1.1/**
2. When prompted, enter the following details and click **OK**.

User Name: **admin**

Password: **admin**

*If you previously changed the router configuration password, use the password you set instead of **admin**.

3. The ADSL Setup screen appears. Scroll to the bottom of the page as below. Delete all of the letters to the right of the "@" symbol, replace them with **talktalkbb** and click **Save Settings**.

Logout

Internet Online

English

Reboot

Manual Setup

MANUAL ADSL CONNECTION SETUP

Please select the appropriate option to connect to your ISP.

- PPPoE/PPPoA** Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users)
- Dynamic IP Address** Choose this option if your ISP uses Dynamic IP Address over DSL.
- Static IP Address** Choose this option if your ISP uses Static IP assignments.

PPPOE/PPPOA INTERNET CONNECTION TYPE :

Enter the information provided by your Internet Service Provider (ISP).

Username : TalkTalk12345@talktalkbb

Password : ●●●●●●

Service Name :

Connection Type : PPPoE LLC

MTU : 1492

Idle Time Out : 0 Minutes (0 = Always On)

VPI : 8

VCI : 35

Save Settings Disconnect Cancel

Tick the Manual Setup box if you are a more advanced user and have the settings for your Internet Service Provider (ISP) available.

Please take care when entering your username and password as these are case sensitive. The majority of connection issues are caused by incorrect username or password combinations.

More...

4. A window asking you to reboot the modem will appear, click **Ok**.
5. Wait for the Modem to reboot. A window will appear stating "DSL Router has been rebooted and is up and running now". You should now be connected to the Internet.